Accessories for fuel oil de-aerators/oil filters

Screw connections

Description For installation in the oil pipe. See ordering table for versions.

Vacuum gauge

Description For indication of the filter condition. Available for direct mounting to standard fuel oil filters. G% union nut at filter end, G% male thread with sealing cone 60° at burner end for burner hose. Or with G% female thread x G% male thread for mounting to filter with G% female thread at tank end. Suitable for use in flood hazard areas. Watertight up to 10 m water column.

Replaceable filter adapter

Description

The replaceable fine filter cartridge can be fitted to all AFRISO filter types (except Z ½-500 and V ½-500) by means of an adapter and can then be operated both in pressure and suction mode.

Oil filter spanner

Description

To loosen the union nut of the filter cup and the replacement system fine filter cartridge of automatic fuel oil de-aerators and fuel oil filters

Open end spanner

Description For easy and fast operation of the replaceable filter adapter.


Hand-held suction pump for fuel oil

25

70060

Description For commissioning and after faults in the suction line system. With check valve/vent valve.

DG: G	PG		it -	Part no.	Price €
Screw connection G¾ x 6 mm	3	1	-	20509	
Screw connection G% x 8 mm	3	1	-	20508	
Screw connection G% x 10 mm	3	1	-	20510	
Screw connection G% x 12 mm	3	1	-	20512	
Vacuum gauge G% with 60° cone, -0.7/+0.9 bar	2	1	-	20400	
Hand-held suction pump for fuel oil	1	1	-	70058	
Replaceable filter adapter	2	1	10	70020	
Open end spanner for replaceable filter adapter	3	1	_	70065	

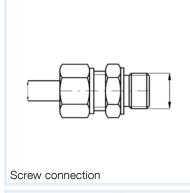







Hand-held suction pump for fuel oil



Oil filter spanner